
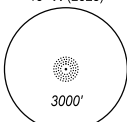
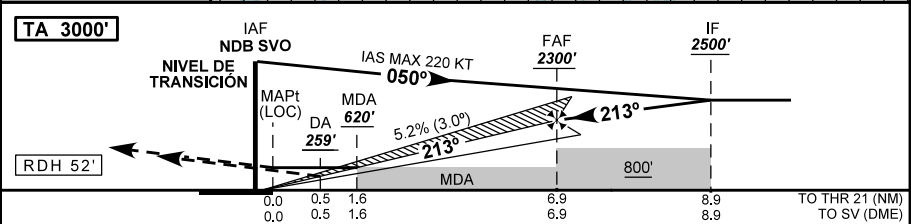


SAUCE VIEJO (SAAV)
SANTA FE

Carta de aproximación por instrumentos
Instrument approach chart

ILS RWY 21

PARANÁ TWR 119.60 118.50			SAUCE VIEJO TWR 118.95 118.45			EMERG 121.50
LOC SV 109.5	FINAL APCH CRS 213°	ALTITUD MNM FAF 2300' (2241')	ILS/DME DA (H) 259' (200')	AD Elev THR Elev 59' 59'	10° W (2025)  3000' MSA 25 NM SVO	
Aproximación frustrada: ASC HDG 213° hasta 3000 ft y seguir instrucciones del ATC.						
Missed approach: Climb HDG 213° to 3000 ft and proceed as directed by ATC.						
NOTA: Nivel de Transición asignado por ATC. RVR 800 M cuando no se utiliza EVS o piloto automático hasta la DA.			NOTE: Transition Level assigned by ATC. RVR 800 M when EVS or autopilot to DA is not used.			

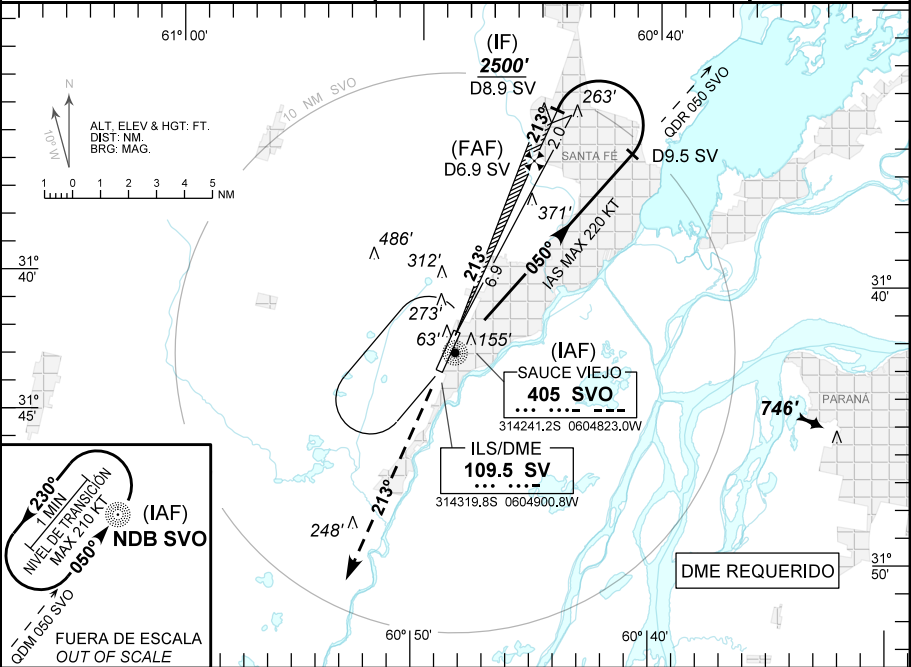

DIRECTA RWY 21 / <i>Straight in RWY 21</i>										Circulación Visual <i>Circle to land</i>			
CAT	ILS/DME					LOC/DME							
	DA 259' OCA 233'		DH 200' OCH 174'		MDA 620' OCA 620'		MDH 561' OCH 561'						
	VIS ALS		VIS SIN ALS		VIS ALS		VIS SIN ALS		CAT	MDA/OCA	MDH/OCH	VIS	
A	800 M RVR 550 M (ver NOTA / see NOTE)		1200 M RVR 1200 M		1900 M		2600 M		A	620'	561'	2600 M	
B					1900 M				B	620'	561'	2800 M	
C					1900 M				C	880'	821'	3800 M	
D					RVR 1900 M				D	880'	821'	4600 M	
GS KT		90	110	130	150	160	DIST to MAPt		6.9	5.9	3.9	2.9	1.6
FAF - MAPt 6.9 NM		4:36	3:46	3:11	2:46	2:36	ALT		2300	1990	1350	1030	620
FPM		480	580	690	800	850	HGT		(2241)	(1931)	(1291)	(971)	(561)


SAUCE VIEJO (SAAV)



SANTA FE

Carta de aproximación por instrumentos

Instrument approach chart

NDB RWY 21

PARANÁ CTL		SAUCE VIEJO APP		SAUCE VIEJO TWR		SAUCE VIEJO GND		EMERG
119.60	118.50	118.95	118.45 120.10	118.95	118.45 120.10	118.95	118.45 120.10	121.50
NDB SVO	FINAL APCH CRS	SIN FAF		MDA (H)		AD Elev		08° W(2018)  3000' MSA 25NM SVO
405	206°	NO FAF		1080' (1021')		THR Elev 59'		
Aproximación frustrada: ASC para 3000 ft con rumbo 206° y seguir instrucciones del ATC.								
Missed approach: Climb to 3000 ft on heading 206° and proceed as directed by ATC.								
NOTA: Nivel de Transición asignado por ATC.				RMK: Transition Level assigned by ATC.				

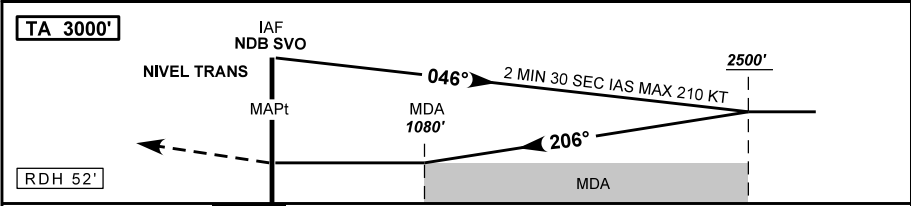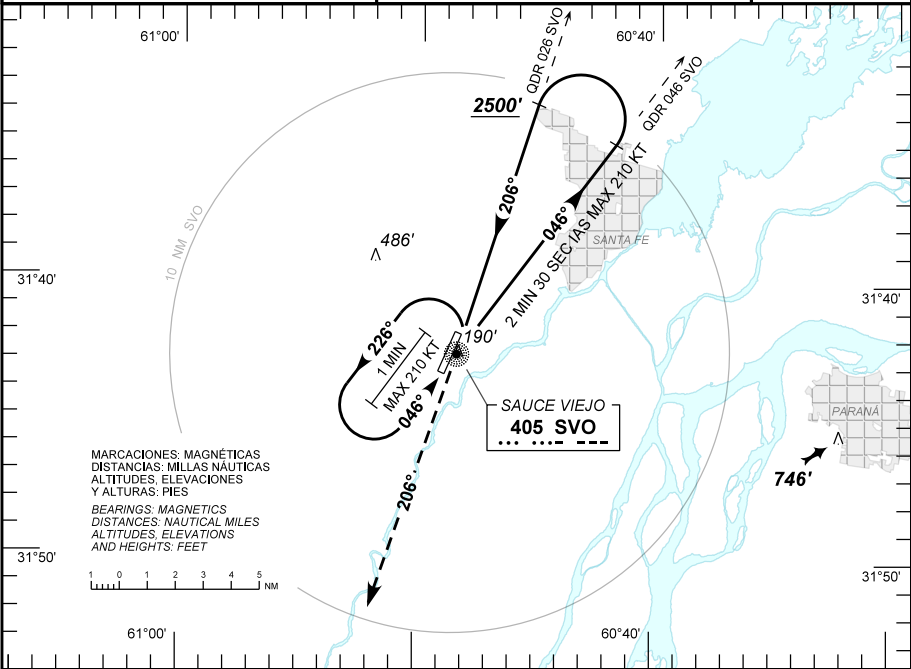




DIRECTA RWY 21 / <i>Straight in RWY 21</i>			Circulación Visual <i>Circle to land</i>			
CAT	NDB					
	MDA 1080'	MDH 1021'				
VIS			CAT	MDA	MDH	VIS
A	5000 M		A	1080'	1021'	5000 M
B			B	1080'	1021'	5000 M
C			C	1080'	1021'	5000 M
D			D	1080'	1021'	5000 M

SAUCE VIEJO (SAAV)
SANTA FE

Carta de aproximación por instrumentos
Instrument approach chart

NDB RWY 03

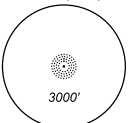PARANÁ TWR 119.60 118.50			SAUCE VIEJO TWR 118.95 118.45			EMERG 121.50
NDB SVO 405	FINAL APCH CRS 041°	SIN FAF NO FAF	MDA (H) 570'	AD Elev (511')	THR Elev 59'	10° W (2025)
Aproximación frustrada: ASC HDG 041° hasta 3000 ft y seguir instrucciones del ATC. Missed approach: Climb HDG 041° to 3000 ft and proceed as directed by ATC.						 3000'
NOTA: Nivel de Transición asignado por ATC.			NOTE: Transition Level assigned by ATC.			MSA 25 NM SVO

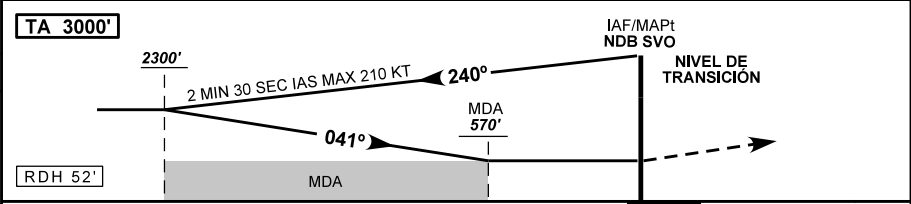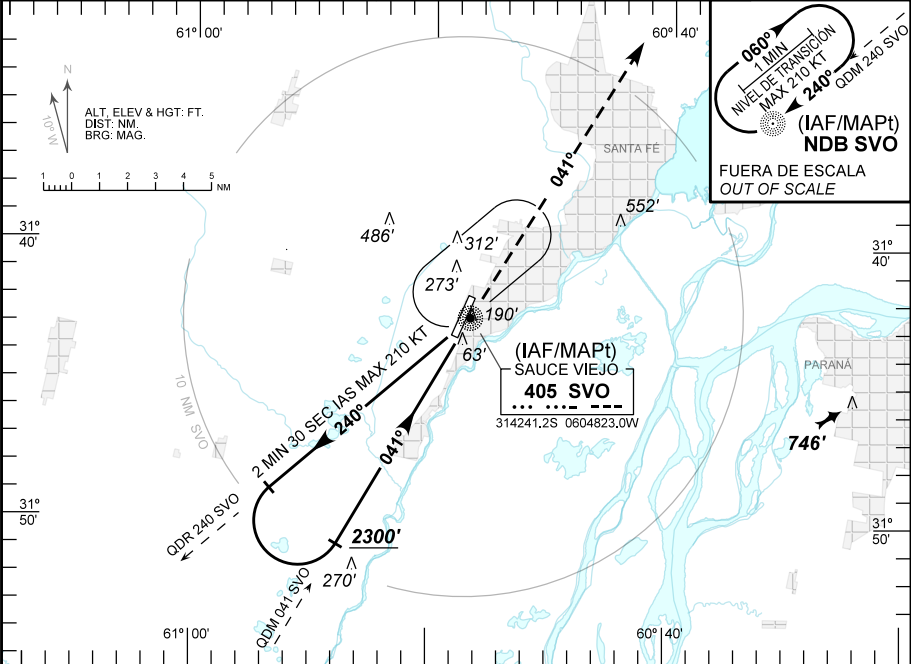

DIRECTA RWY 03 / Straight in RWY 03				Circulación Visual Circle to land			
CAT	NDB						
	MDA 570'	OCA 570'	MDH 511'	OCH 511'			
		VIS ALS			VIS SIN ALS		
A							
B							
C							
D							